



ETOP-4770 Manual

Ice & Snow Melting Controller
for Outdoor Conditions

Contents

1. Introduction	3	6. Daily Use	26
1.1. Product Program	4	6.1. System On	27
1.2. System Applications	5	6.2. Low temperature.	28
1.3. Function mode.	6	6.3. Heating	29
2. Important Safety Instructions	7	6.4. Forced Heat	30
2.1. Liability	8	6.5. Error	31
3. Installation	9	6.6. Maintenance	32
3.1. Mounting the Controller	10	7. System Test	33
3.2. Terminal Connections.	11	7.1. Test Mode LED Overview (continued)	34
3.2.1. Power Supply and Load	12	7.2. Test Mode (continued)	35
3.2.2. Sensors and Remote Control	13	8. Technical Specifications	36
3.3. External Sensors and Remote Controller	14	8.1. Controller - ETOP-4770	37
3.3.1. Ground sensor - ETOG	15	8.1. Controller - ETOP-4770 (continued)	38
3.3.2. Gutter sensor - ETOR	16	8.2. Ground sensor - ETOG	39
3.3.3. Outdoor sensor - ETF-744/99	17	8.3. Gutter sensor - ETOR	40
3.3.4. Sensor Cable Recommendations	18	8.4. Outdoor sensor - ETF-744/99	41
3.4. Connecting the Remote Controller (optional).	19	8.5. Remote Control Panel - ETOP-R	42
4. Setup System	20	8.6. Wiring Single Phase + Neutral	43
4.1. Set After-run (continued)	21	8.6.1. Wiring Single Phase Two Wire	44
4.2. Set Type of Application.	22	8.6.2. Wiring 3-Phase Delta	45
4.3. Set Moisture Sensitivity	23	8.6.3. Wiring 3-Phase + Neutral Star	46
4.4. Recommended Settings	24	9. Contact Information	47
5. Control	25		

1. Introduction

The ETOP controller is designed for outdoor installation, high power control and easy operation.

Key parameters:

- NEMA 4X /IP 66
- -55°F / -50°C
- 90 A
- Magnetic control
- Remote control

Snow and Ice detection system for the control of electrical heating cable. The controller monitors both temperature and moisture and the heating system is only activated if there is a possibility of snow or ice.

Used for ground, gutter and roof, down pipe, loading ramps, balcony, ramps for driving and walking, antennas and railroad track switch.

The controller can be used together with the ETOG ground sensor or ETOR gutter sensor with temperature sensor ETF-744/99.

The controller can also be controlled remotely from the ETOP-R control panel, placed inside the building.

1.1. Product Program

Controller Program

ETOP-4770	Outdoor Controller for Ice and Snow melting
ETOP-R	Remote Control Panel for the ETOP

Sensors and Accessories

ETOG-55	Ground sensor for detecting temperature and moisture
ETOG-56/ETOK-1	Embedded ground sensor for detecting temperature and moisture
ETOR-55	Gutter sensor for detecting moisture
ETF-744/99	Outdoor sensor for detecting temperature

1.2. System Applications

The controller uses readings from temperature and moisture sensors to ensure optimal economic power consumption to keep areas free of ice and snow. Low temperature will trigger the system to start moist detection and when moist is detected the system will start heating the designated area. When the moist status is cleared the system will continue heating the area for the “after run” time or until all temperature sensors find moist detection obsolete. By use of multiple temperature sensors the lowest temperature will define system state. The system can be forced into heating by activating Forced Heating. It is important that system settings and sensor choice is aligned.

Gutter, roof and downpipe applications

Use the controller ETOP-4770 together with the gutter sensor ETOR-55 and the outdoor temperature sensor ETF-744/99.

The ETOR sensor is designed for installation in gutters, downpipes, etc. the ETOR sensor detects moisture, while the ETF sensor measures temperature.

Ground area, ramp and balcony applications

Use the controller ETOP-4770 together with the ground sensor ETOG and optional the outdoor temperature sensor ETF-744/99.

The ETOG sensor is designed for embedding in the surface of the outdoor area. ETOG sensors measure ground temperature and moisture. The ETF-744/99 sensor can be used for measuring rapid temperature drops.

1.3. Function mode

Gutter (ETOR) Application: When the ETOP detects a temperature below 3°C, via the ETF-477, the heating in the ETOR sensor will be activated.

When the temperature is below 3°C and moisture is detected on the ETOR, the ETOP will activate the electrical heating cable.

Ground (ETOG) Application: When temperature is below 3°C, this will trigger the system to start detection.

If moisture is detected, the ETOP will start heating the designated area.

When the moisture status is cleared, the system will continue heating the area for the “after run” time.

All modes can be overwritten by forced heating.

A test mode can be entered for system testing.

2. Important Safety Instructions



WARNING – READ THIS MANUAL!

Carefully read this instruction manual in its entirety, paying close attention to all the warnings listed below. Make sure that you fully understand the use, displays and limitations of the controller because any confusion resulting from neglecting to follow this instruction manual, or from improper use of the device it concerns, may cause an installer to commit errors which could lead to ice and snow conditions capable of causing serious injury.



WARNINGS

- The system is not a failproof and will require independent surveillance.
- To avoid electric shock, disconnect the heating system power supply at the main electrical panel before carrying out any work on this controller and the associated components.
- Installation must be carried out by qualified personnel in accordance with appropriate regulations (where required by law).
- The installation must comply with the national and/or local electrical codes.

2.1. Liability



NOTICE

- The language used in the original documentation is English. Other language versions are a translation of the original documentation.
- The manufacturer cannot be held liable for any errors in the documentation. The manufacturer reserves the right to make alterations without prior notice.
- Content may vary due to alternative software and/or configurations.

OJ cannot be held liable for any errors in catalogues, brochures or other printed material. OJ reserves the right to alter its products without notice. This also applies to products already on order, provided that such alterations can be made without requiring subsequent changes in specifications already agreed. All trademarks in this material are the property of the respective companies. OJ and the OJ logotype are trademarks of OJ Electronics A/S. All rights reserved.

ENVIRONMENT AND RECYCLING

Protect the environment by disposing of the package in compliance with local regulations for waste processing.

RECYCLING OF OBSOLETE APPLIANCES


Equipment containing electrical components should not be disposed of together with domestic waste.

It must be separately collected with electrical and electronic waste in accordance with current local regulations.

3. Installation

The controller is for wall mounting, and can be placed outdoors.


3.1. Mounting the Controller

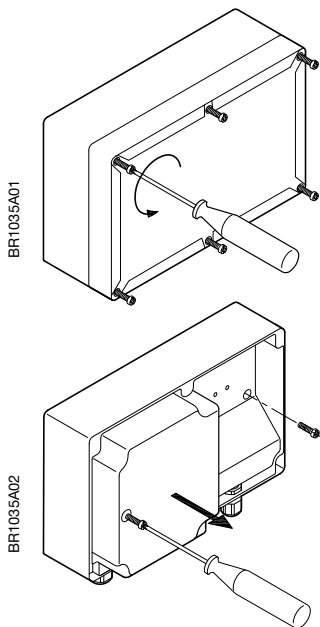

1. Open the controller/ unscrew the clear lid.
2. Use the drilling template included in the Quick Guide to mark the mounting holes.
3. Mount the controller on a straight wall (screws not included). Use 6 screws maximum 4 mm / size 7.
4. Open the controller and remove the inner cover to get access to the terminals.
5. Remove the plugs in the cable glands used.
6. Mount the cables through the cable glands and tighten the glands.

Important! Use the correct cable sizes and make sure the cable glands are tight around the cables to maintain the proper protection level (IP66/NEMA4x).

3.2. Terminal Connections

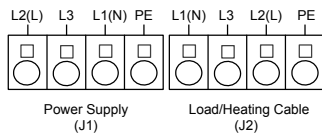

Connect the power supply and load wires to the terminals depending on the type of net you have, eg. three-wire or phase to neutral system.

BR1035A14

3.2.1. Power Supply and Load

Power Supply

EU	US/CAN
3 phase 230/400 VAC ±10%, 50 Hz	3 phase 277/480 VAC ±10%, 60 Hz
1 phase 230 VAC ±10%, 50 Hz	Single phase 120 VAC & 208/240 VAC ±10%, 60 Hz

Load/heating cable

EU	US/CAN
3 x 6900W 3 phase @ 230/400 VAC, 3 x 30 A	3 x 3600 W using 3 x single phase @ 120 VAC, 3 x 30 Amp
6900 W at 1 phase 230 VAC, 30 A	• 1 x 6240 W using single phase two wires @ 208 VAC, 1 x 30 Amp • 1 x 7200 W using single phase two wires @ 240 VAC, 1 x 30 Amp • 1 x 8310 W using 3 phase @ 277 VAC, 1 x 30 Amp • 1 x 14400 W using 3 phase @ 480 VAC, 1 x 30 Amp

3 phase	1 phase
Line (L1)	Neutral (N) or Line (L1)
Line (L3)	
Line (L2)	Line (L2)
Ground (PE)	Ground (PE)

3 phase	Single phase
Load (L1)	Neutral (N) or Load (L1)
Load (L3)	
Load (L2)	Load (L2)
Ground (PE)	Ground (PE)

* see section 8.6 for wiring

3.2.2. Sensors and Remote Control



Connect the wires for the sensors and the remote control panel to the terminals, depending on the type of sensors required in the system.

Remote Control Panel, ETOP-R (Optional)

- Terminal 1: HMI - A
- Terminal 2: HMI - B
- Terminal 3: HMI - GND
- Terminal 4: HMI - Supply (+28 VDC / 35 mA)

Sensors:


- Terminal 5: Temp sensor 2 – GND
- Terminal 6: Temp sensor 2 – Signal
- Terminal 7: Temp sensor 1 – GND
- Terminal 8: Temp sensor 1 – Signal
- Terminal 9: Moist sensor – Signal 1
- Terminal 10: Moist sensor – Signal 2
- Terminal 11: Heating element in sensor ETOG/ETOR - GND
- Terminal 12: Heating element in sensor ETOG/ETOR – supply (+28 VDC / 125 mA)

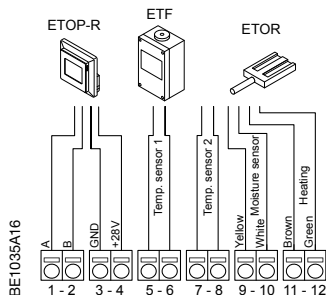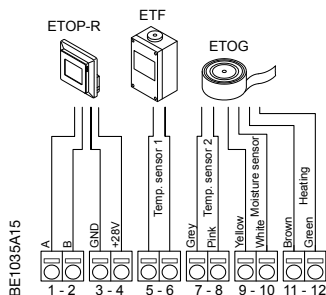

3.3. External Sensors and Remote Controller

The remote controller uses readings from temperature and moisture sensors to ensure optimal economic power consumption while keeping outdoor areas and roofs free of ice and snow.

3.3.1. Ground sensor - ETOG

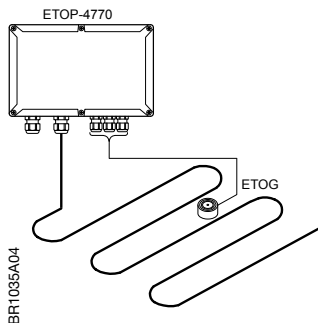

Designed for embedding in the surface of the outdoor area.
Measures temperature and moisture.

Should be installed where the worst snow and ice problems normally occur. The sensor should be embedded in a concrete base on a hard surface with the top of the sensor flush with the surface.


Where an asphalt surface is used, or where easy installation is desired, installing ETOG-56 together with ETOK-1 is the obvious choice.

The sensor cable must be installed in accordance with current regulations.


NOTE: We strongly recommend the use of cable pipes in order to protect the sensor cable.

Detailed installation instructions are supplied with the sensor.

The ETOG sensor is only heating when it is in S&I detection mode.

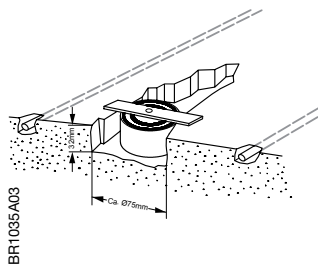


3.3.2. Gutter sensor - ETOR

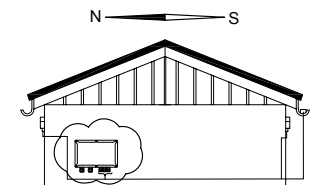


For installation in a gutter or downpipe on the sunny side of the building. It is important to ensure that the sensor contact elements face against the flow of melt water.

Detailed installation instructions are supplied with the sensor.

Note that the pink and grey wires are not used.

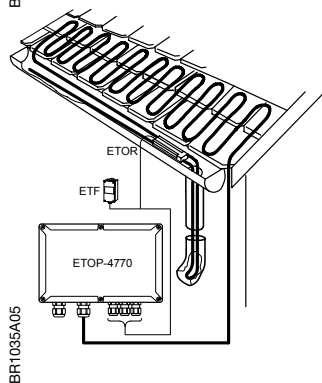

3.3.3. Outdoor sensor – ETF-744/99

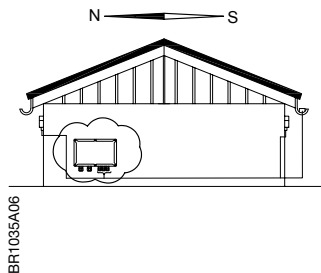

Measures temperature.

Is normally used in combination with ETOR gutter sensors.

An ETF sensor can also be used in combination with ETOG ground sensors for outdoor areas. The ETF sensor can detect rapid drops in air temperature, thus avoiding icy areas.

The sensor should be mounted on the wall beneath the eaves on the north side of the building.


3.3.4. Sensor Cable Recommendations

With the exception of ETOG-56, which has a 25 m (82 ft) cable, ETOG-55 and ETOR sensors are supplied with a 10 m (33 ft) cable, which can be extended up to approx. 200 m (650 ft) using standard installation cable:

6x1.5 mm² (6x AWG 15) for ETOG,
4x1.5 mm² (4x AWG 15) for ETOR and
2x1.5mm² (2x AWG 15) for ETF.

The ETF sensor can be extended up to approx. 50 m (164 ft) in length. Sensor cables must be installed in accordance with current regulations. They must never be installed in same conduit as power cables as electrical interference may distort the sensor signal.

3.4. Connecting the Remote Controller (optional)

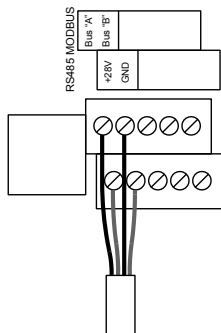


Connecting Modbus using screw terminals

For connection to ETOP-4770, please see
3.2. Terminal Connections

Note: Do not use the RJ12 6P4C terminal for Modbus

4. Setup System

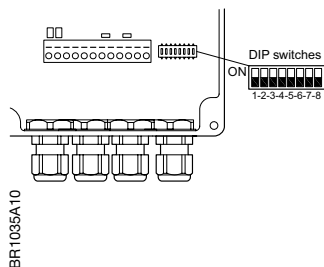

4.1. Set After-run and forced heating time

To ensure that all ice and snow is completely melted the heating system will stay on for a specified time after there is no longer any need for melting snow. If some ice and snow remains after the heating system has been deactivated, the after-run time should be increased slightly. The longer the afterheat duration, the more effective and less economical the system will be.

On DIP switch 1-4 you can set the after-run time. It can be set between 2 and 17 hours.

4.1. Set After-run (continued)

DIP switches 1-4: After-run time, minimum 2 hours

All DIP switch settings here can be combined for the after-run duration as required.

DIP	ON / OFF	DESCRIPTION
1-4	OFF	2 hours minimum after-run time
1 2-4	ON OFF	+1 hour to minimum after-run time (2+1)
2 1, 3, 4	ON OFF	+2 hours to minimum after-run time (2+2)
3 1, 2, 4	ON OFF	+4 hours to minimum after-run time (2+4)
4 1-3	ON OFF	+8 hours to minimum after-run time (2+8)
1-4	ON	17 hours maximum after-run time (2+1+2+4+8=17 hours)

Note: If none of the above settings is choisen, the DIP will have + 2 hours as default settings.

4.2. Set Type of Application

Choose the sensor type, used in the system.

DIP	ON / OFF	DESCRIPTION
5	OFF	ETOG Sensor
5	ON	ETOR Sensor

Sensor not heated from ETOP when load on output is activated.

DIP switch 6: NOT USED.

4.3. Set Moisture Sensitivity

Choose the required sensitivity as a combination of DIP switch 7 and 8.

DIP 7	DIP 8	SENSITIVITY
OFF	OFF	Minimum ¹⁾
ON	OFF	Low
OFF	ON	Normal
ON	ON	Maximum ²⁾

1) Ice and snow contains a lot of impurities, i.e. water has high conductivity.


2) Snow and water is very pure, i.e. water has very low conductivity.

Note: if none of the above settings is choisen, the DIP will have normal as default settings.

4.4. Recommended Settings

DIP	ON / OFF SETTING	DESCRIPTION
1	OFF	After-run time: $2 + 8 = 10$ hours
2	OFF	
3	OFF	
4	ON	
5	OFF	Moisture sensor type: ETOG sensor
6	Not used	
7	OFF	Moisture sensor sensitivity: Normal
8	ON	

5. Control

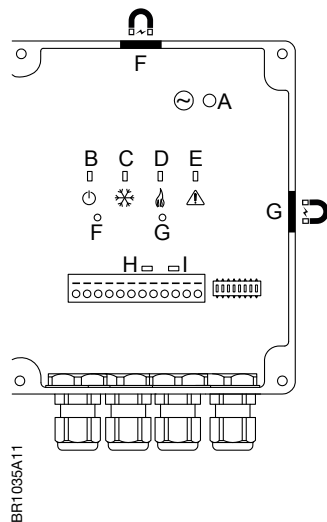

Magnetic sensors and push buttons have equivalent functions. Magnetic sensor is recommended.

MAGNETIC SENSOR	PUSH BUTTON	LED
Top		Flashes in 2 sec
Right side		Flashes in 2 sec

SYMBOLS USED	
	LED on
	Flashing LED
	LED off
	Push button


6. Daily Use

6.1. General Operation

The controller has a magnetic sensor for easy operation or (two push buttons). LED lights indicate the state of the system.

No.	ICON	FUNCTION	LED	DESCRIPTION
A		POWER ON	 Green	Power supply connected No supply voltage
B		SYSTEM ON	 Green	System active: Automatic detection and control working Standby: System will only heat if Forced Heat is activated.
C		LOW TEMP	 Green	Load will heat if moisture is detected. Too warm for automatic load activation (5 °C)
D		HEATING	 Green 	Melting active No load on heating Forced Heat active
E		ERROR	 RED	Error detected Test mode active
F		SYSTEM ON		Push button to start automatic control. Temperature and snow & ice detection sensors are active. Hold button for 3 sec. to stop system
G		Forced Heat		Push button to start Forced Heat Hold button for 3 sec. to stop Forced Heat

6.1. System On

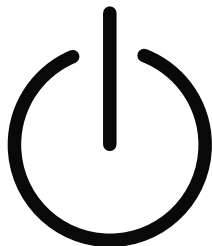


Activate F to start the snow melting system.

A Green LED indicates that the system is active.

Press and hold the button for 3 sec. to stop the snow melting system

6.2. Low temperature

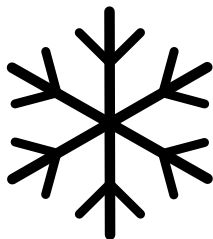


A Green LED indicates that the temperature is within specified range.

Depending on the presence of ice or snow detected by the moisture sensor, snow melting is running.

If the system is used with an ETOP-R for temperature logging an ETF-744 must also be used.

6.3. Heating

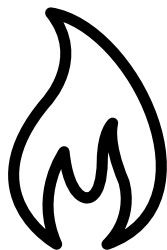

A Green LED indicates that the snow melting is active and the heating is on.

Temperatur logging.

If the system is used for temperature logging, then another sensor must be connected

6.4. Forced Heat



In order to force ice and snow melting ON in any condition, it is possible to turn on the output relay to start the heating.

Activate G to start the Forced Heat setting.

A Flashing green light indicates: Forced Heat is active. The heating will stay on until time out or manually stopped.

Time out is same as for after-run.

Manual stop:

Activate G for 3 sec. to stop Forced Heating. The system will return to a normal state.

Make sure to turn off the Forced Heat setting, when all the snow and ice has melted, to save energy.

6.5. Error



A Red light indicates that an error is detected by the system.

A Red LED Flashing indicates that the Test Mode function is activated.

6.6. Maintenance

To ensure proper system behaviour, it is necessary to keep the controller, sensors and remote in good condition.

Every Autumn or when the need arises the system must be inspected.

Undertake a visual inspection of the following:

ETOP-4770

- Cracks in the casing
- Defect gaskets
- Water/moisture inside the lid (condensation)
- Power LED on

ETOP-R

- Clean with a dry towel
- Power on LED on

ETF-744, ETOR and ETOG

- Visual inspection

7. System Test

At any time the system can be tested by entering test mode.

7.1. Test Mode LED Overview

See the position of the LED in section 5. Control.

	PRIMARY MAGNETIC SENSOR	SECONDARY BUTTONS
1. Start test mode by	Swiping the magnetic sensors in the following sequence: „top“ - „right-side“ - „top“ - „right-side“.	pressing the buttons in the following sequence:    
2. Toggle through test mode status by	Swiping magnet on right side magnetic sensor.	pressing the  button
3. Exit test mode at any time by	Holding magnet on top magnetic sensor for 3 sec.	pressing  button for 3 sec.

7.1. Test Mode LED Overview (continued)

No.	ICON	FUNCTION	LED / BUTTON	DESCRIPTION
A		POWER ON	● Green	Power connected
B		SYSTEM on / off	● Green	System active
C		Internal temp Sensor	● Green ● Green ○	Internal temp sensor within specified range Internal temp sensor outside specified range Internal temp sensor error or disconnected
D		External temp sensor 1	● Green ● Green ○	External temp sensor 1 within specified range External temp sensor 1 outside specified range External temp sensor 1 error or disconnected
E		ERROR	● RED	Test mode active
F		Test mode on / off		Test mode on / off Start: Push / swipe Stop: Hold for 3 sec.
G		Test mode on / toogle		Test mode on / toogle Start: Push / swipe Toogle: Swipe
H		External temp sensor 2	● Green ● Green ○	External temp sensor 2 within specified range External temp sensor 2 outside specified range External temp sensor 2 error or disconnected
I		MOIST	● Green ● Green ○	Sensor detects moisture Sensor does not detect moisture Moisture sensor error or disconnected

7.2. Test Mode (continued)

Step	Symbols	A 	B 	C 	D 	E 	H 	I 	HEATING ELEMENT POWERED	
									Moisture sensor heated	Relay
1	Idle State									
2	Detecting State								×	
3	Melting State								×	×
4	After-run State									×
5	Forced Heat State									×
6	Moisture testing							 moisture not detected  moisture detected  sensor disconnected	×	
7	T1, Internal temp sensor			 within range  outside range						
8	T2, External temp sensor 1 (ETOG/ETOR)				 within range  outside range					
9	T3, External temp sensor 2 (ETF)						 within range  outside range			


* If the measured temperature is under 5 °C/41 °F Sensor Heating will be activated

Step 1-6: Test of output on sensor and load

Step 7-9: Test of temp sensor connection and legal range

8. Technical Specifications

8.1. Dimensional drawing

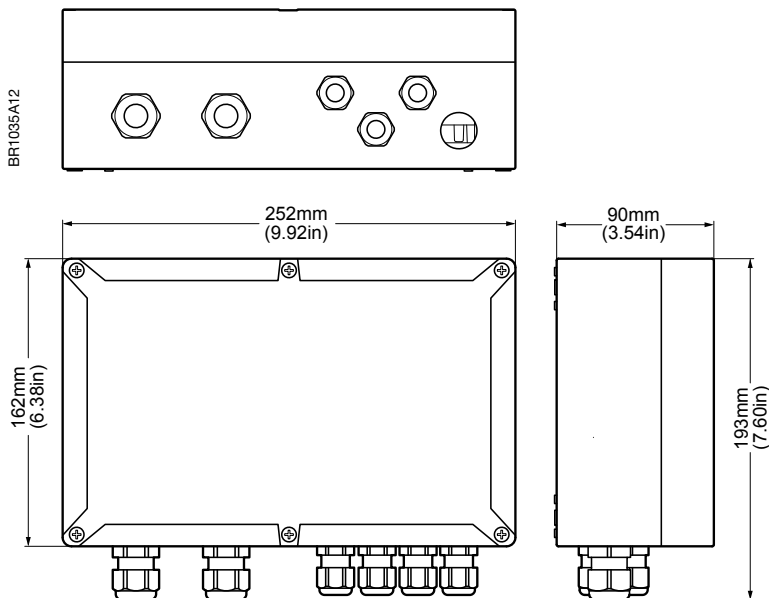

Values are based on SI units. All non-SI units are calculated.

8.1. Controller - ETOP-4770

Purpose of control	Electrical ice and snow melting
Method of mounting	Wall mounting
Supply voltage	EU: 3~ 240/400 VAC, $\pm 10\%$ 50 Hz ~ 230 VAC, $\pm 10\%$ 50 Hz US/CAN: 3~ 120/208 VAC, $\pm 10\%$ 60 Hz 3~ 277/480 VAC, $\pm 10\%$ 60 Hz ~ 120/240 VAC, $\pm 10\%$ 60 Hz
Max. pre-fuse	EU 32 A US/CAN 30 A
Enclosure rating	IP 66
Nema Class	4X
Wire size, terminals (Power in/out)	0.75-10 mm ² / 20 AWG – 4 AWG
Wire size, terminals (Low voltage)	0.2-2.5 mm ² / 24 AWG – 12 AWG
Cable size, MS 13.5 glands (signal, Modbus)	5-12 mm
Cable size, MS16 glands (mains, load)	8-14 mm
Output voltage to remote control panel	28 VDC, 35mA
Output voltage to heating element for moist sensor	28 VDC, 125mA

Max. Load/supply	EU: 3x6900W at 3~ 230/400 VAC, 3x30A 6900W at ~ 230 VAC, 30A US/CAN: 3x8310W at 3~ 277/480 VAC, 3x30A 3x3600W at 3~ 120/208 VAC, 3x30A 3600W at ~ 120 VAC, 30A 7200W at ~ 240 VAC, 30A
Standby consumption	Approx. 1.25W @ 230VAC
Ambient air humidity	10-95% non condensing
Ambient operating temp.	-50/+50°C (-58 °F/ 122 °F)
Control temperature range	-30/+30°C (-22 °F/ 86 °F)
Storage/transport temp.	-50/+70°C (-58 °F/ 158 °F)
Dimensions	H/162, W/252, D/90 mm H/6.38, W/9.92, D/3.40 in
Weight	1500 g
Control pollution degree	2
Overvoltage category	III
Type of action	1.B
Software class	A
Rated impulse voltage	4kV
Ball pressure temperature (TB)	125°C
Classification	Class I

8.1. Controller - ETOP-4770 (continued)

Dimensions	H/162, W/250, D/89 mm H/6.38, W/9.84, D/3.50 Inches
Build-in depth	23 mm
DIN module size	3xM36
Weight	1500 g
Display	H/25, W/38 mm. segment backlit
Control pollution degree	2
Overvoltage category	III
Type of action	1.B
Software class	A
Rated impulse voltage	4kV
Ball pressure temperature (TB)	125°C

8.2. Ground sensor – ETOG

Purpose of control	Moisture detection and measurement of ground temperature.
Method of mounting	Embedded in outdoor surfaces.
Sensor type	NTC (12kOhm)
Max. cable length	200 m
Enclosure rating	IP 68
Nema Class	6P
Ambient operating temp.	-57/+158°F / -50/+70°C
Dimensions, ETOG-5x	H/32, Ø60 mm 1.26 / 2.36 Inches
Dimensions, ETOG-56	H/78, Ø63.5 mm 3.07 / 2.50 Inches

Note: Please follow the “Sensor cable recommendations” in Section 3.3.4.

8.3. Gutter sensor - ETOR

Purpose of control	Moisture detection
Method of mounting	In gutter or downpipe
Sensor type	NTC (12kOhm)
Max. cable length	200 m
Enclosure rating	IP 68
Nema Class	6P
Ambient operating temp.	-57/+158°F / -50/+70°C
Dimensions	H/105, W/30, D/13 mm 4.13 / 1.18 / 0.51 Inches

Note: Please follow the “Sensor cable recommendations” in Section 3.3.4.

8.4. Outdoor sensor – ETF-744/99

Purpose of control	Measurement of outdoor temperature
Method of mounting	On the wall
Sensor type	NTC (12kOhm)
Max. cable length	200 m
Enclosure rating	IP 54
Nema Class	3
Ambient operating temp.	-57/+158°F / -50/+70°C
Dimensions	H/86, W/45, D/35 mm 3.39 / 1.77 / 1.38 Inches


Note: Please follow the “Sensor cable recommendations” in Section 3.3.4.

8.5. Remote Control Panel – ETOP-R


Purpose of control	Remote control of ETOP
Method of mounting	Wall mounting indoor
Max. cable length	30 m
Enclosure rating	IP 20
Nema Class	Type 1
Ambient operating temp.	5/+50°C (41 °F/122 °F)
Control temperature range	-57/+158°F / -50/+70°C
Storage/transport temp.	-50/+70°C (-58 °F/ 158 °F)
Dimensions	H/32, Ø60 mm 1.26 / 2.36 Inches

Note: Please follow the “Sensor cable recommendations” in Section 3.3.4.


8.6. Wiring Single Phase + Neutral

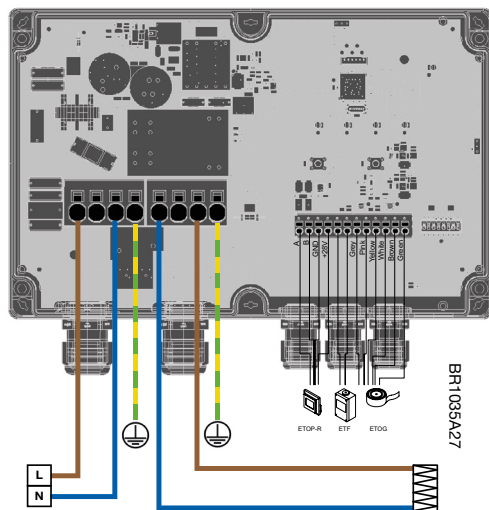



When supplied with three single-phase 120V wires, the neutral wires can be joined in the ETOP housing using a wire connector. A wire connector for neutral wires is not part of the interior of the ETOP.

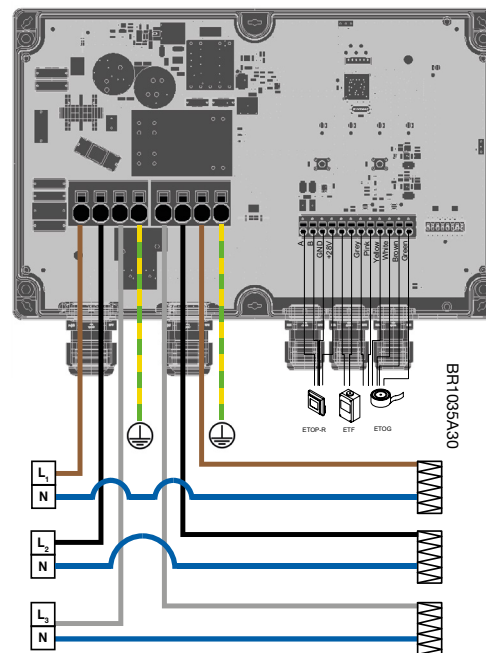

 8.6.1. Wiring Single Phase Two Wire

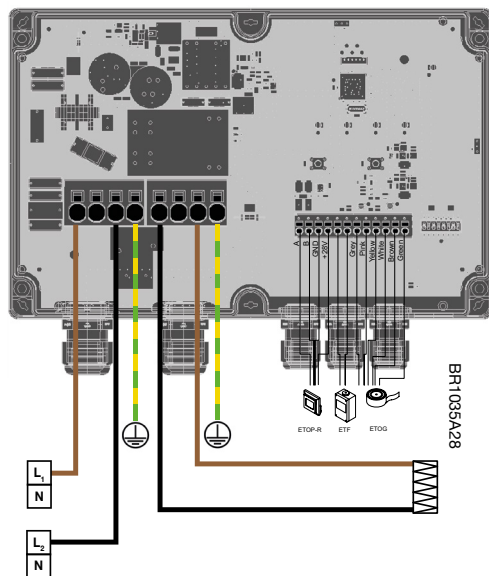

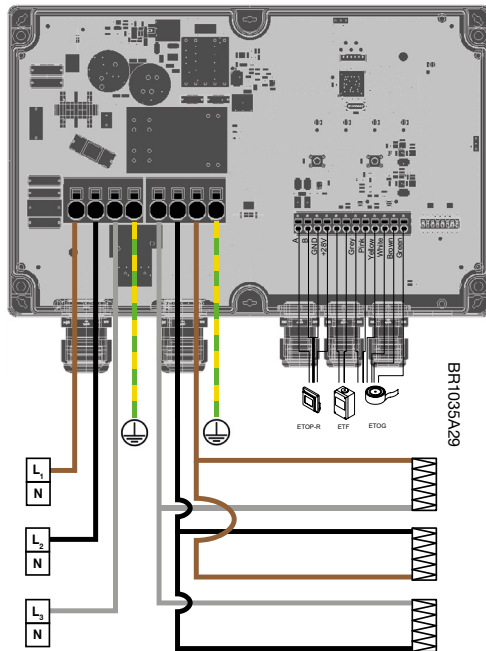



9. Contact Information

Contact your supplier for further information